



DESCRIPTION AND UNIT NUMBERS

- | | |
|---|--|
| 1 Main Fuel Cells, 1 To 6, F & L
Auxiliary Fuel Cells, 7 To 9, R & L | 9 Auxiliary Fuel Transfer Panel |
| 2 Fuel Level Sight Gauges | 10 Fuel Gauge Sump Drain |
| 3 Booster Pumps | 11 Fuel Pressure Autozero Indicators |
| 4 Control Valves | 12 Carburetors |
| 5 Strainers | 13 Primers |
| 6 Engine Driven Fuel Pumps | 14 Primer Spiders |
| 7 Fuel Pressure Autozero Transmitters | 15 Main Fuel Cell Vent System, Ducts and Inlet |
| 8 Fuel Transfer Main Panel | 16 Auxiliary Fuel Cell Vent System, Outlet |
| 15 Shut-off Valves | 17 Cell Bay Drain Lines |
| 19 Fuel Gauge Selector Valves | |
| 20 Fuel Filter Opening | |

- | | |
|--|--|
| | Main Fuel Lines To Engines |
| | Fuel Lines To Sight Level Gauges |
| | Drain Lines |
| | Vent Lines |
| | Fuel Transfer Lines |
| | Fuel Lines From Primers |
| | Fuel Lines - Wing Auxiliary Tanks To Fuel Transfer |

MAIN FUEL SYSTEM
B-24D